



FITTINGS LAYOUT UNDER DOME
ARROW INDICATES SERVICE POSITION